



SKIRTING ACCESSORIES



▲ 70294- M12 Tin Snips
*For cutting panels and trim. Easy to use and durable. 12" length.



◀ Wind Stay Rods

*For use with vinyl skirting. Allows panel to expand and contract with seasonal changes. Using 1 rod for every 3-4 panels is recommended. Use more frequently for taller panels or windy areas, or upgrade to 24" rods.
70000- 12" Length
 *For panels up to 36" tall
70001- 24" Length
 *For panels 36" and taller




▲ Step 1: Insert the stay rod inside the S-lock of two joined panels.



Step 2: Insert the stay rod head inside the rib of the top back trim. The top front trim is installed next.



▲ 70295- M14 Tin Snips
*Larger snips with more leverage, the preferred snips for all types of skirting. 14" length.

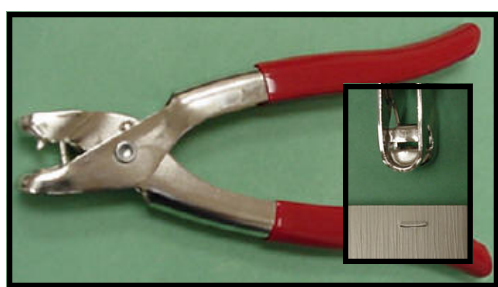


▲ 70299- SL 5 Model Punch Tool (Standard)- *For use with Vinyl Panels. We recommend at least 4 punches per panel.

Exterior Refurb



▲ 48211- 7" Ground Spikes
*We recommend using 7 spikes per vinyl ground channel, and 6 spikes per steel "J" channel for firm soil. Number of ground spikes used will vary depending on your soil type.

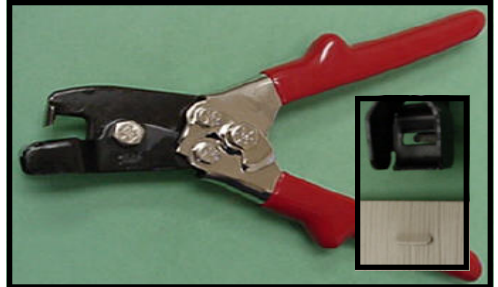

▲ 70298- SL 8 Model Punch Tool (Heavy Duty)- Punch up to three vinyl panels at a time!

For more fasteners, see page 82.

