
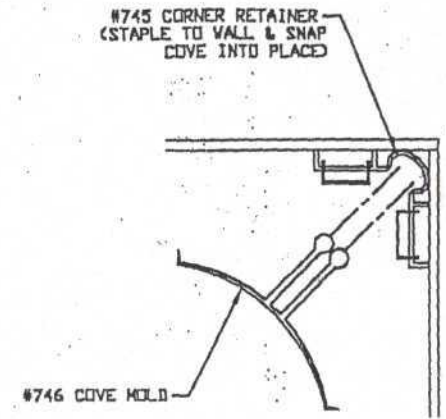


SHELTER COMPONENTS PLASTIC GROUP

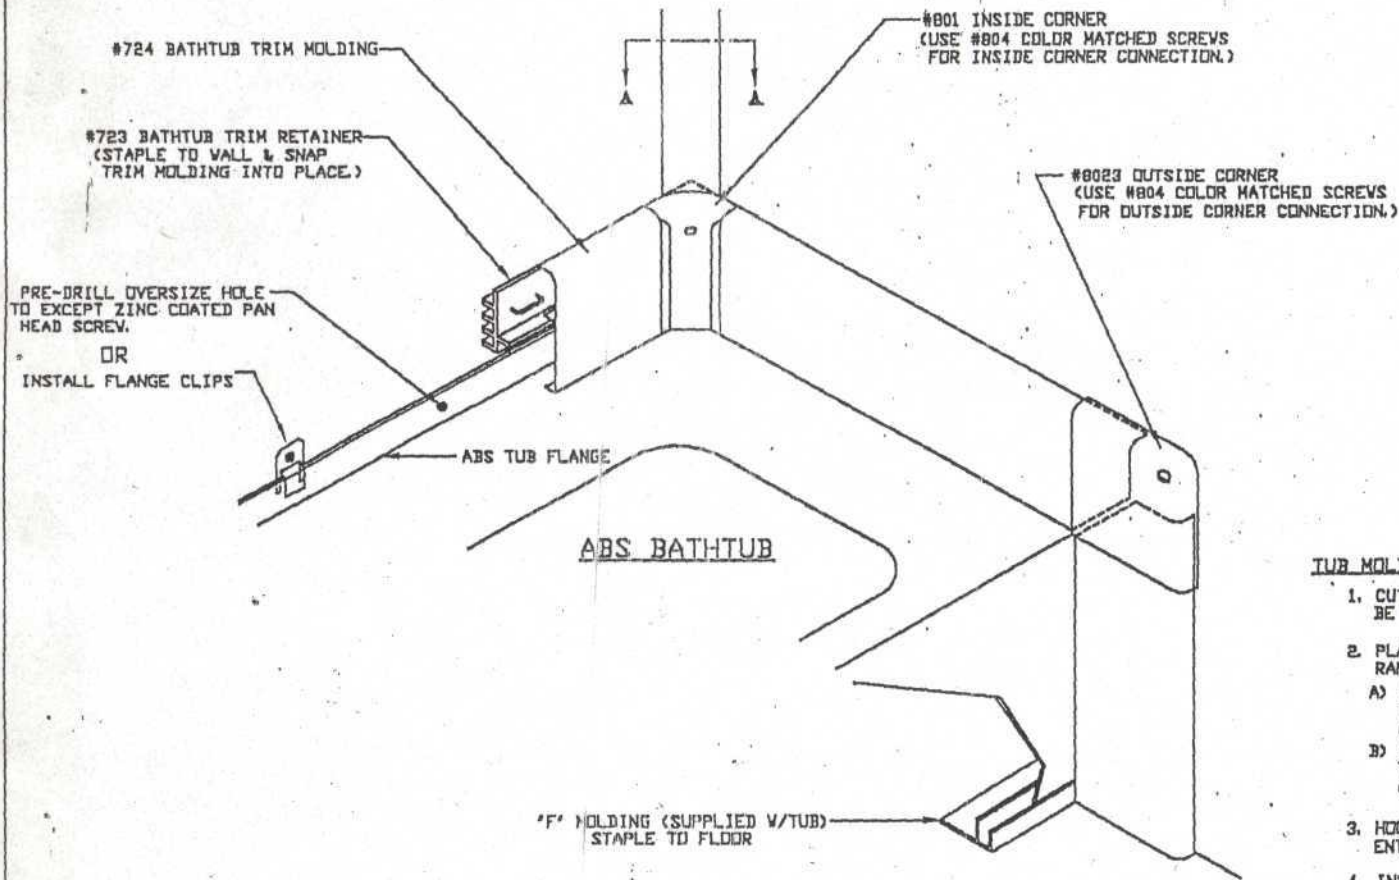

SECTION A-A

TUB MOLDING INSTALLATION INSTRUCTIONS:

1. CUT RETAINER AND MOLDING TO PROPER LENGTHS. RETAINER CAN BE CUT SEVERAL INCHES SHORT AND CENTERED ON WALL.
2. PLACE RETAINER APPROX. 1/8" ABOVE TUB/SHOWER FLANGE AND RANDOMLY STAPLE TO WALL.
 - A) IT IS STRONGLY RECOMMENDED THAT A WOODEN BACKER BE PRESENT BEHIND THE RETAINER TO ALLOW STAPLES TO ADEQUATELY FASTEN.
 - B) IF A FLANGE CLIP IS PRESENT AND "BOVS" THE RETAINER, THE RETAINER SHOULD BE CUT AWAY AT THE FLANGE CLIP TO ALLOW A STRAIGHT APPLICATION.
3. HOOK MOLDING OVER THE TOP OF THE RETAINER AND SNAP ENTIRE LENGTH OF MOLDING INTO RETAINER.
4. INSTALL #801 ISC AND #8023 OSC. WHERE TWO MOLDING PIECES OVERLAP UNDER THE #8023 OSC, YOU MAY BE REQ. TO NOTCH OUT THE 90 DEGREE LEG FOR PROPER FIT.

THIRD ANGLE PROJECTION	ENG/CAI
	PART NAME BATHTUB TRIM APPLICATION
	DRAWN BY JH
	DATE 3-11-97 SCALE